

## (III) Használati utasítás

(EN) Manua

**©E** Handbuch PD Podręcznik

Uživatelská příručka **(FB)** Manuel

Handleiding (JP) 使用説明書

(ES) Manua Руководство пользователя

(SK) Manuál (PT) Manual

NO Håndbok (II) Manuale

BCP-56

## **Quick Start Manual** (English)

## Download the complete manual at www.BBBparts.com

Cadence transmitter

 
Frittfreauenz-Sensor

 
Capteur de cadence

Cadanssensor Fransmisor de cadencia Fransmissor de cadência Frasmettitore cadenza

Pedálfordulatszám mérő szenzor Nadajnik kadencji

Передатчик каданса Snímač kadencie






## **MOUNTING CADENCE MAGNET / CADENCE SENSOR**

Install the cadence magnet on the non drive train side of the crank.
Install the cadence sensor on the chainstay.
Position the cadence sensor on the chainstay to achieve the correct alignment with the cadence magnet. If needed, move the cadence magnet. The distance between the magnet and the sensor point should be maximum 3mm. When you have achieved the correct alignment, pass two zip-ties through the sensor and around the chainstay.
Cut off the excess length of the zip-ties.



 Check the Quick Start DigiBoard manual for the pairing procedure or download the complete manual at www.BBBparts.com.





www.BBBPARTS.com

The specifications and designs may be changed without notice. BBB has no responsibility for misprints or changed technical content.